

T PLATEB H


H series-high temperature brazed plate heat exchanger



H series is made of high temperature resistant material, the max. working temperature is up to 900°C, which is perfectly suitable to serve as gas heating or cooling heat exchanger in the clean energy technology- Fuel Cell system.



Brazing Material	Nickel				
Model TCB	H300-800-900-1500-2500				H301-801-901-1501-2501
	(A1,A2/B1,B2)				(A1,A2/B1,B2)
Max. Working Pressure (bar)	10/10	7/7	3/3	2/2	10/10
Min. Test Pressure (bar)	15/15	15/15	15/15	15/15	15/15
Max. Working Temperature (°C)	0~650	~700	~800	~900	~550

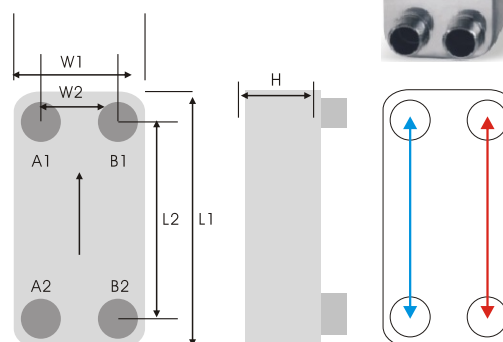

Model TCB	L1 (mm)	L2 (mm)	W1 (mm)	W2 (mm)	H Thickness (mm)	Weight (kg)	Heat Transfer Area/ plate (m²)	Total Heat Transfer Area (m²)	Volume/ Channel (liter)	Total Volume (liter)
H300-301	194	154	80	40	10.0+2.60*N	0.68+0.050*N	0.0117	(N-2)*0.0117	0.028	(N-1)*0.028
H800-801	306	250	106	50	10.0+2.40*N	1.64+0.137*N	0.0255	(N-2)*0.0255	0.055	(N-1)*0.055
H900-901	304	250	124	70	10.0+2.30*N	1.66+0.134*N	0.0300	(N-2)*0.0300	0.065	(N-1)*0.065
H1500-1501	522	466	106	50	10.0+2.40*N	3.32+0.240*N	0.0475	(N-2)*0.0475	0.095	(N-1)*0.095
H2500-2501	528	456	246	174	11.5+2.40*N	8.00+0.514*N	0.1099	(N-2)*0.1099	0.232	(N-1)*0.232

N: number of plates



Tempco S.r.l.
via Laboratori Autobianchi,1 • 20832 Desio (MB) Italy
Piva 03026390967



T +39 0362 300830
F +39 0362 300253



www.tempco.it
info@tempco.it

Standard connections

Standard Connections	Threaded Connections															Solder Connections												Height (mm)
Tempco Model	PT/NPT/GB Male								PT/NPT/GB Female							Ø 6.6 mm	Ø 9.73 mm	Ø 12.9 mm	Ø 16.15 mm	Ø 19.25 mm	Ø 22.36 mm	Ø 25.6 mm	Ø 28.8 mm	Ø 35.25 mm	Ø 41.5 mm	Ø 54.3 mm		
	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"	2 1/2"	3"	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"	2 1/2"												1/4"	
100	•								•							•	•	•	•	•							20	
300	•	•							•	•						•	•	•	•	•	•						20	
500	•	•							•	•						•	•	•	•	•							20	
800	•	•	•						•	•	•					•	•	•	•	•	•	•					27	
900	•	•	•	•	•				•	•	•					•	•	•	•	•	•	•	•				27	
1500	•	•	•	•	•				•	•	•	•				•	•	•	•	•	•	•	•	•			27	
1700	•	•	•	•	•				•	•	•	•				•	•	•	•	•	•	•	•	•			27	
2100			•	•	•	•	•		•	•	•	•	•					•	•	•	•	•	•	•	•	•	27/42/54	
2500			•	•	•	•	•		•		•	•	•					•	•	•	•	•	•	•	•	•	27/42/54	
2700				•	•	•	•	•	•	•	•	•	•	•										•	•	•	27/42	
2600					•	•	•		•									•	•	•	•			•	•	•	27/42/54	

• Flange, SAE Connections are available

1 Installation and Mounting Advice

1. The brazed plate heat exchanger should be installed vertically as the instruction mark shown on the label (↑) demonstration as below:





Fig. 1 Installation of the brazed plate heat exchanger



Improper Installation Position

2. Recommended installation position(Fig.2)

- Bottom Support
- Sheet Metal Bracket
- Crossbar& Bolts
- Stud Bolts

* Vibration dampener or other absorbing devices are also recommended.

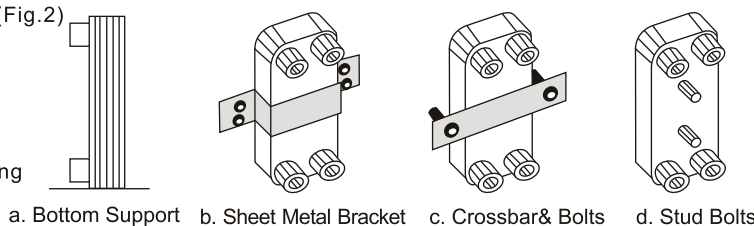


Fig. 2 Recommended Installation Position

2 Softening Treatment of Cooling Tower Water

Softening treatment and regular maintenance for cooling tower can reduce the scale clogging problem. While using chemical additives to do the cleaning, the concentration of the additive should be carefully controlled. Avoid using corrosive additives. If stainless steel and copper react to the corrosive content, it will reduce the pressure resistance on the brazing joints and possibly lead to internal or external leakages. To avoid the problem mentioned above, please refer to the below data for proper chemical additives:

pH:6~8
 $\text{SO}_4^{2-} < 30\text{mg/L}$
 $\text{Cl}^- < 50\text{ppm} (< 100^\circ\text{C})$
 $\text{NH}_4^+ < 0.1\text{mg/L}$

3 Prevention of Water Hammer

Water hammer occurs when the pipes carry incompressible fluids and the flow suddenly changes its velocity. The most common case occurs when one rapidly closes the solenoid valve and thus, causes instant pressure in the pipes. This will damage the valve, heat exchanger and other equipment. In order to avoid the problem mentioned above, installation of pressure suction pipe, water hammer arrestor, air chamber...etc is highly recommended.

4 Cleaning

To clean the brazed plate heat exchanger, it is recommended to use weak acid (5% phosphoric acid, nitric or oxalic acid...etc.) back flushing to remove soft debris inside. (as Fig. 3). The flow rate of the cleaning solution should be at least 1.5-2 times of the normal flow rate and the duration should be 30 minutes. After cleaning, the heat exchanger should be rinsed carefully with large amounts of clean water to purge any remaining acid solution before re-starting the system.

